



TWIST EXTRACTOR SET (5 PCS) 1/4" HEX OUTPUT DRIVE, SAE SIZES



1. FEATURES

 
2. SPECIFICATIONS

3. INSTRUCTIONS


1. FEATURES

- Removes worn, rusty, or deformed fasteners with a 1/4" output drive
- Sizes include 1/4", 5/16", 3/8", 7/16", and 1/2"
- For removal only. Do not use twist sockets to install new nuts


2. SPECIFICATIONS

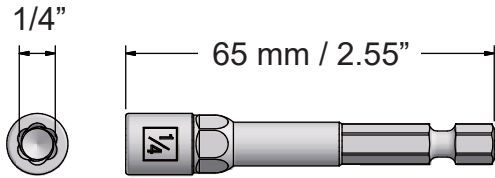


Standard torque 26.8 Nm / 19.8 ft-lb

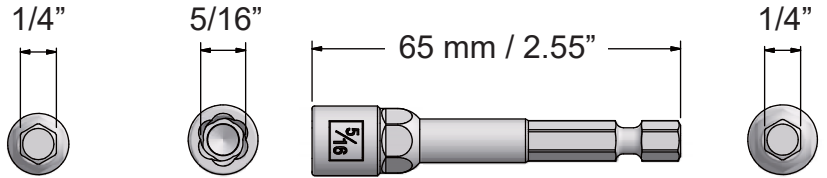 


Standard torque 33.6 Nm / 24.8 ft-lb

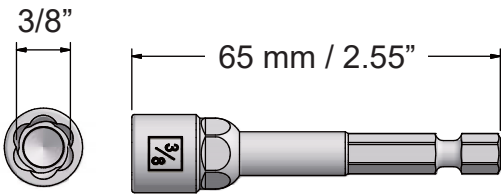 

Standard torque 49.1 Nm / 36.2 ft-lb

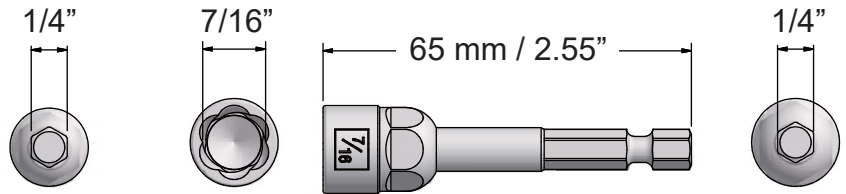 

Standard torque 57.8 Nm / 42.6 ft-lb

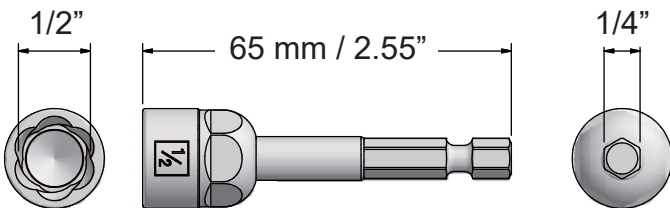 

Standard torque 68.6 Nm / 50.6 ft-lb

Material	SCM 440
Surface	Manganese phosphate
Hardness	HRC 48-52

3. INSTRUCTIONS



CAUTION



- Always read the instructions carefully before using the tool
- The twist extractor is design for removing rusty, worn, or deformed fasteners.
- DO NOT use the twist extractor to remove regular fasteners or to install.
- Ensure the working area has adequate lighting
- Keep children and unauthorized persons away from the working area
- Keep working area clean and tidy, dry and free from unrelated materials
- DO NOT allow untrained persons to use this tool kit
- Always wear eye protection that meets OSHA and ANSI Z87.1 standards
- Always wear gloves when working with the tool
- Always wear ear protection
- Disposal: Customers should follow local regulations to handle used/waste parts

- 1 Choose a suitable size socket for the fastener to be removed.
- 2 Connect the socket to the fastener.
- 3 Use a 1/4" hex socket to connect the 1/4" hex output side.
- 4 Connect the 1/4" hex socket to a ratchet tool or an electric drill.
- 5 Turn counter clockwise to remove the fastener.

